



210 Recessed Rail IP Surface Mounting Instruction

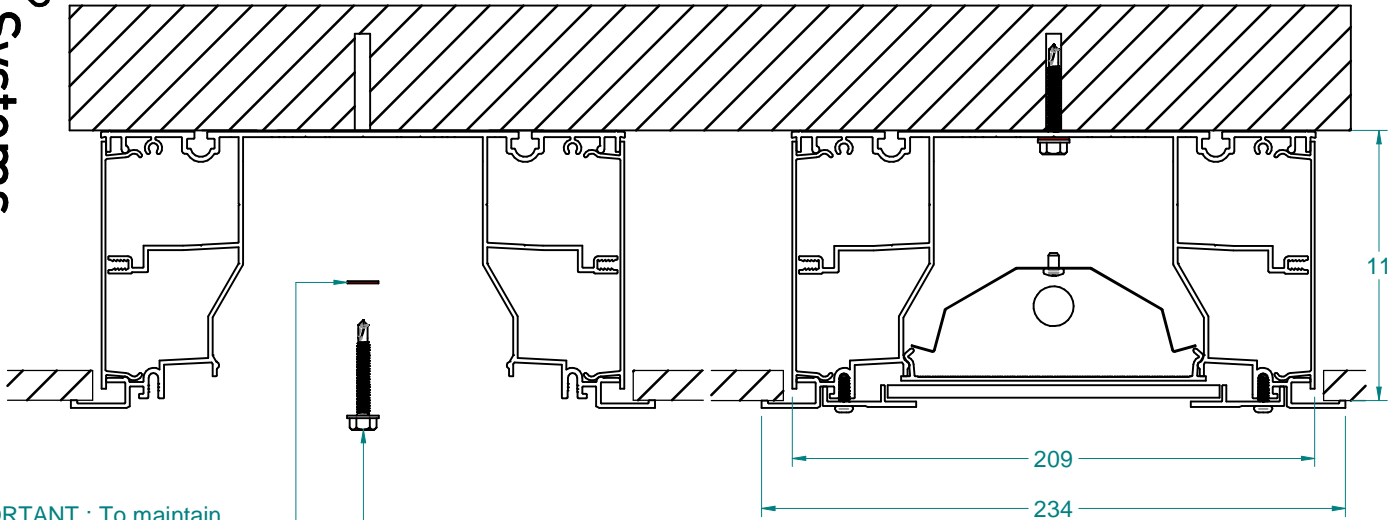

IMPORTANT : To maintain the IP rating of the system, ensure fasteners are installed with rubber washers or silicon is applied around the holes.

Fastener (not supplied)

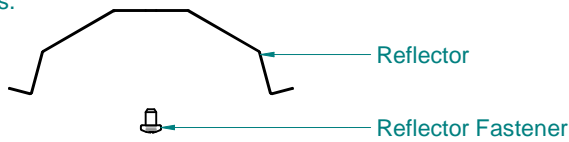


Reflector

Reflector Fastener



Lamp



Diffuser / Cover



IP Cover Assembly



IP Cover Fasteners



Important

- Using appropriate fasteners to suit the mounting surface is the responsibility of the installer.
- To prevent over-loading, fasteners should be spaced evenly as per the recommended span.
- If the luminaire has remote (external) control gear, please refer to the link below for recommended cable length and wiregauging.
<http://www.kliksystems.com.au/sites/default/files/wire%20size%20calculation%20Instr.pdf>

<p>Timber</p>	<p>Gyprock</p>	<p>Metal plug</p>	<p>Plastic plug</p>	<p>Max Span 2.0m Within 0.5m Join or bend</p>	<p>Note: Extrusion body drilled in nominal suspension locations.</p> <p>These may need to be relocated onsite by installer to suit onsite requirements. Where possible advise Klik at time of order of fixing location requirements.</p>
---------------	----------------	-------------------	---------------------	--	--