



100 Tbar (100TB) Recessed Mounting Instruction

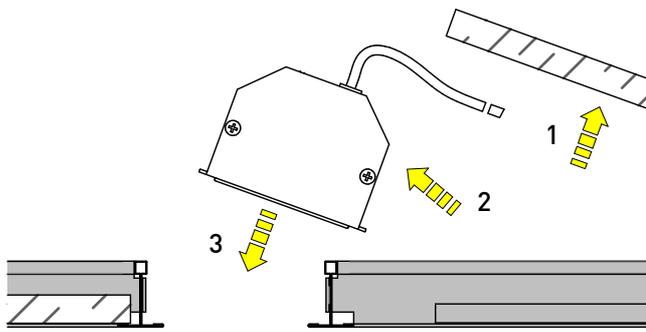

STEP 1 - OPTION 1


1. Access ceiling space by moving tiles and obstructions.
2. Feed luminaire into ceiling cavity taking care to avoid knocking or disturbing existing structure or wiring, HVAC features etc.
3. Lower the luminaire into the T-Bar slot.

OR

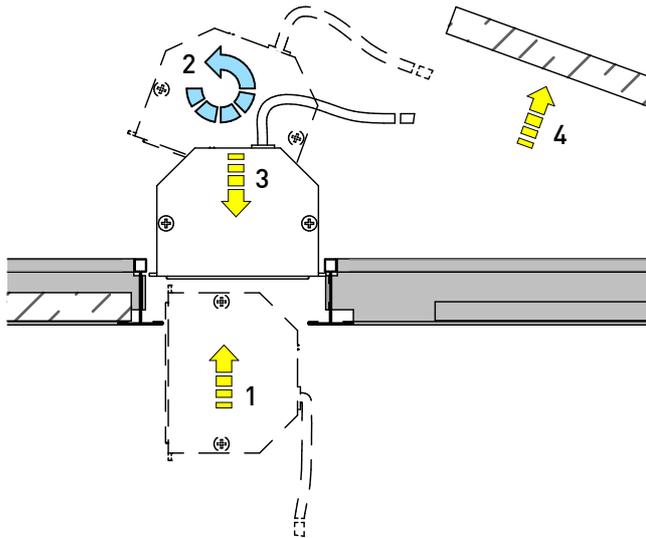


STEP 1 - OPTION 2

1. Rotate 100 TBar unit 90degrees on its side then feed it up into the Tbar channel one end at a time, take care with the flex as it is a tight fit.
2. Once it is fully within the ceiling cavity, rotate the unit so the diffuser is downwards.
3. Lower the luminaire into the T-Bar slot.
4. Move ceiling panels to gain access for installation of the 100Tbar retention clips.

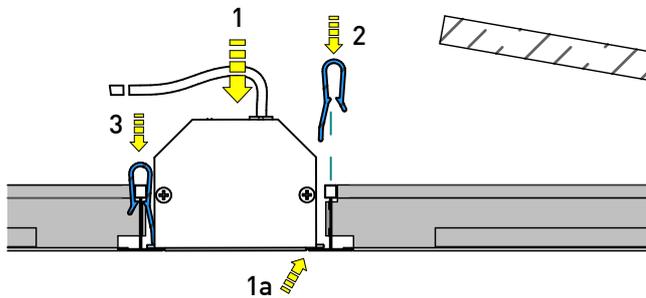

STEP 2 -

1. Centre luminaire in slot lengthways.
- 1a. Ensure that diffuser/cover is fully seated within T-bar slot with even clearance to the sides.
2. Install the clips over the T-Bar profile. The long side of the clip must touch the luminaire body and the clip leg must rest on the luminaire flange.
3. Install 4 clips per standard unit, 100mm in from the ends. The maximum spacing between clip sets is 1000mm. Additional sets of clips (evenly spaced) are added as required for longer units.

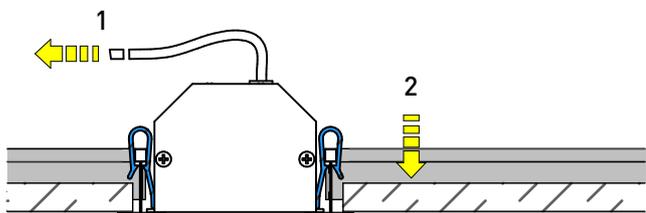

STEP 3 -

1. Make any necessary electrical connections.
2. Confirm correct operation of unit.
3. Make-good any features disturbed during installation and replace ceiling tiles/panels.

Important

- To prevent over-loading, fasteners should be spaced evenly as per the recommended span.
- Avoid touching bare LED chips during installation of LED modules.
- If the luminaire has remote (external) control gear, please refer to the link below for recommended cable length and wire gauging.
<http://www.kliksystems.com.au/sites/default/files/wire%20size%20calculation%20Instr.pdf>

10875-03-A