


Using appropriate fasteners to suit the mounting surface is the responsibility of the installer. Units should be supended at two points at all times to avoid the over-loading of fasteners.

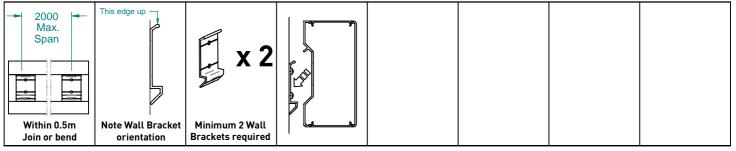

10559-03-C

www.kliksystems.com - info@kliksystems.com.au